
WHEEL OFFSET GUIDE

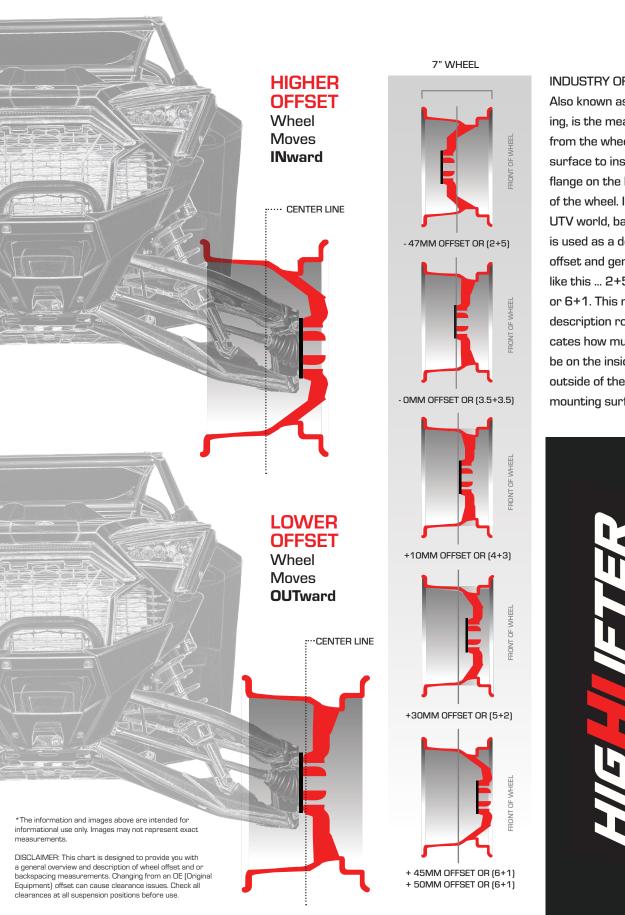

INDUSTRY OFFSET

Also known as back spacing, is the measurement from the wheel's mounting surface to inside the rim flange on the back side of the wheel. In the ATV/ UTV world, back spacing is used as a description of offset and generally looks like this ... 2+5, 4+3, 5+2, or 6+1. This measurement description roughly indicates how much wheel will be on the inside and outside of the wheel mounting surface.

